


HOME DECORATORS C O L L E C T I O N

BF-25175 MARTHA STEWART LIVING MUDROOM WALL STORAGE WITH HOOKS
19"Hx20"Wx13"D

INV#19149









ASSEMBLY INSTRUCTIONS








Made In China

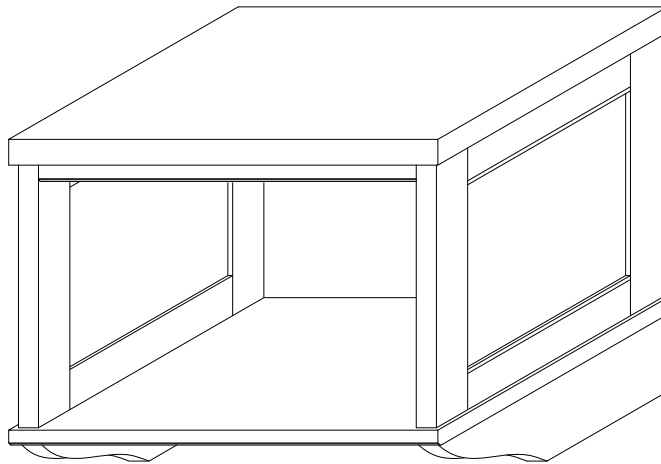

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.



IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

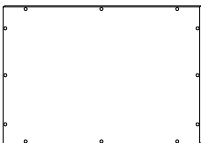PARTS LIST		
A  TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC
D  ADORNING PANEL-1PC	E  BOTTOM PANEL-1PC	F  DOWN LEFT SIDE PANEL-1PC
G  DOWN RIGHT SIDE PANEL-1PC	H  DOWN BACK PANEL-1PC	I  UP BACK PANEL-1PC
J  CAM-BOLTS-16PCS	K  CAM-LOCKS-16PCS	L  CAM-T00L-1PC

M  POTHOOKS-2PCS	N $6\text{mm} \times 1\frac{1}{2}"$  SCREWS-4PCS	O $8\text{mm} \times 1"$  SCREWS-2PCS
P $7\text{mm} \times 5\frac{1}{8}"$  SCREWS-12PCS	Q  SHEET IRONS-4PCS	R $6\text{mm} \times 5\frac{1}{8}"$  SCREWS-4PCS
S  GECKOS-4PCS	T $8\text{mm} \times 1\frac{1}{2}"$  SCREWS-4PCS	U  EVA PADS-2PCS
V  DOWELS-2PCS		




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

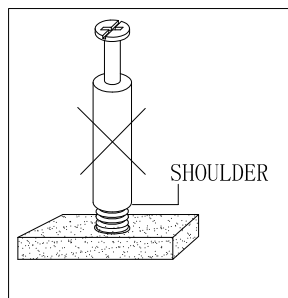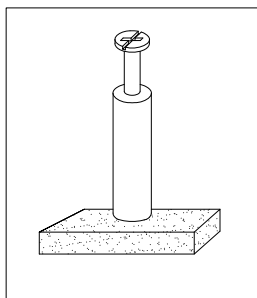


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

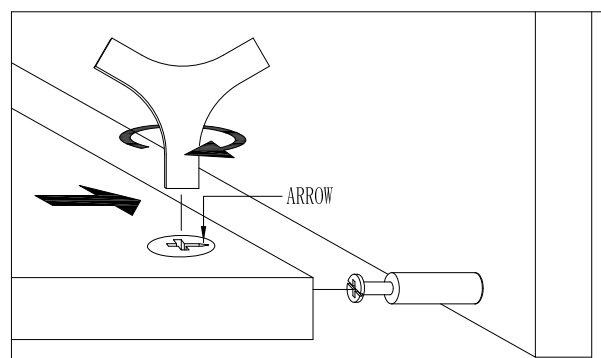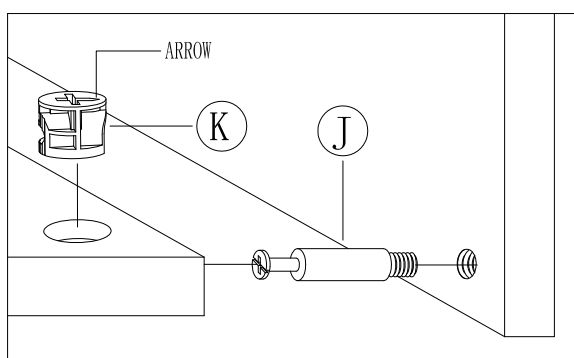


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

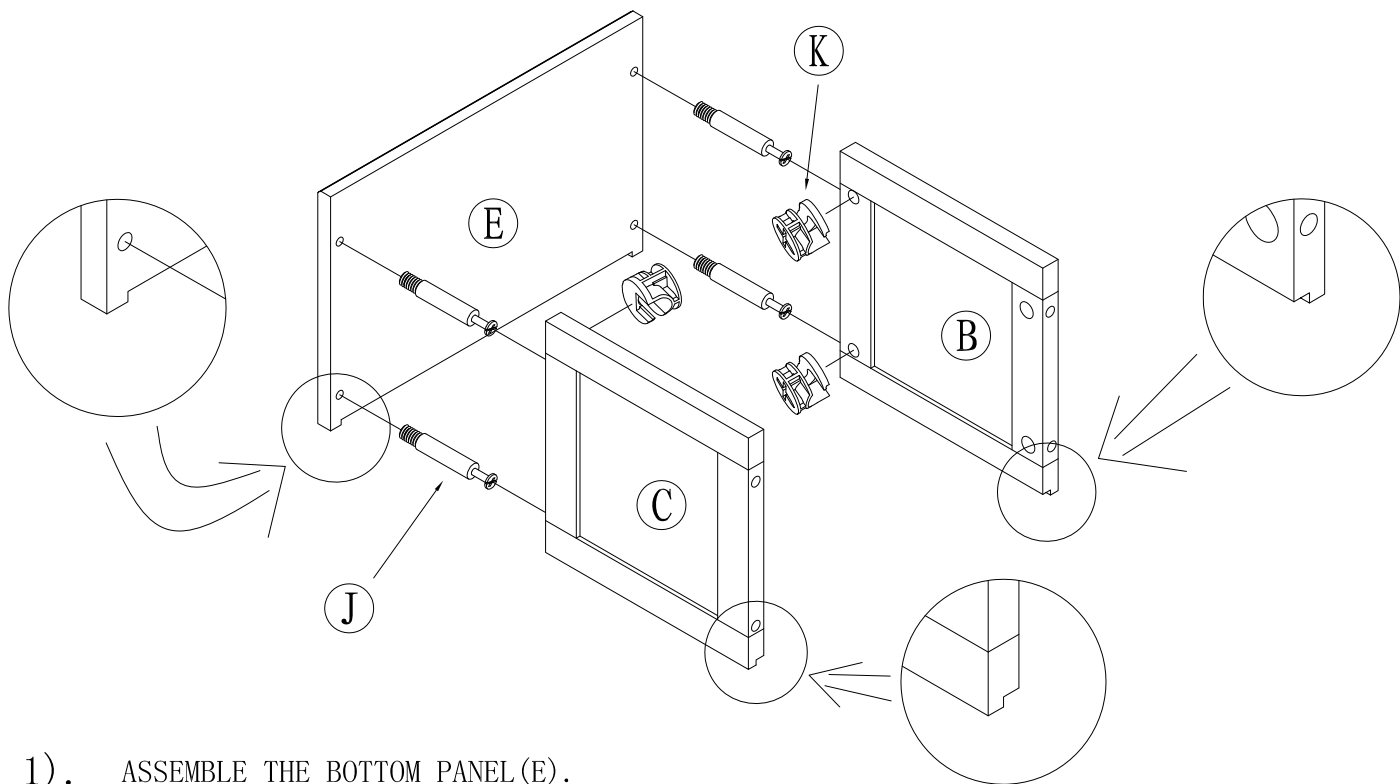


1). ASSEMBLE THE BOTTOM PANEL (E).

- ROTATE 4 CAM-BOLTS (J) INTO THE HOLES IN THE BOTTOM PANEL (E).
- PLACE CAM-BOLTS (J) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (K).

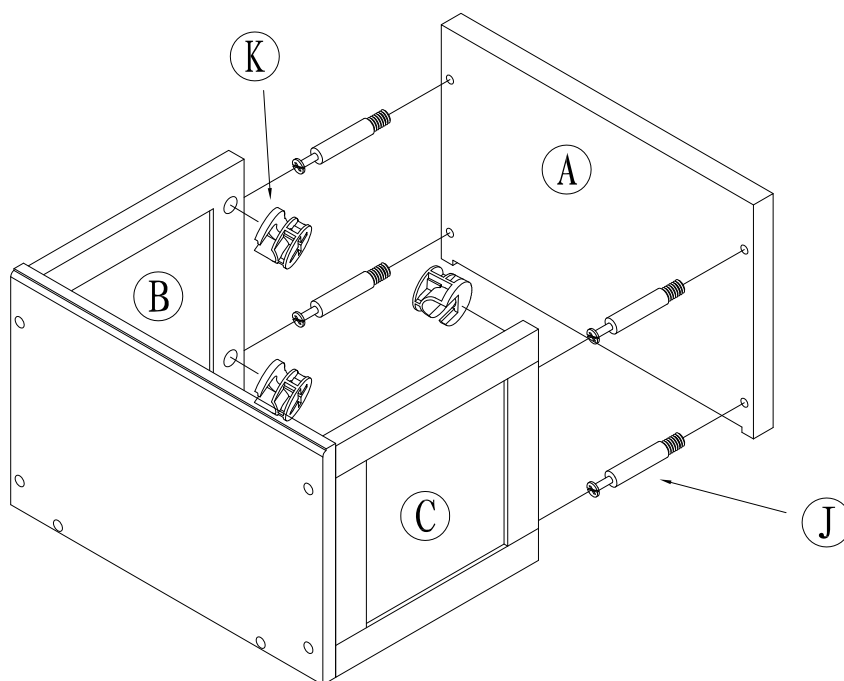


2). ASSEMBLE THE TOP PANEL (A).

- ROTATE 4 CAM-BOLTS (J) INTO THE HOLES IN THE TOP PANEL (A).
- PLACE CAM-BOLTS (J) INTO THE HOLES IN THE SIDE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (K).

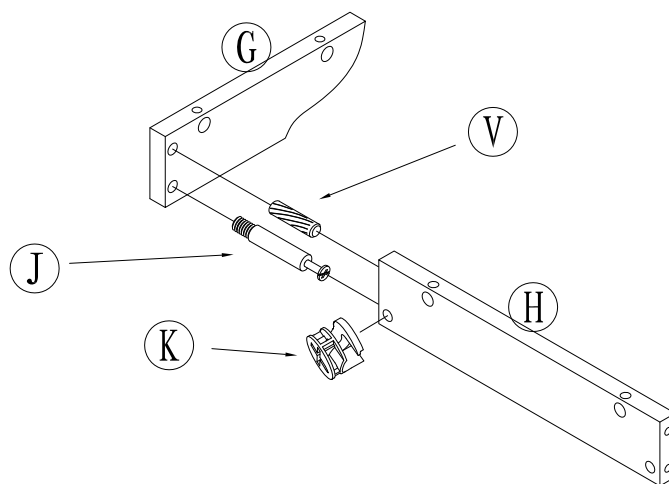


3). ASSEMBLE THE DOWN BACK PANEL (H).

- ROTATE 1 CAM-BOLT(J) AND INSERT 1 DOWEL(V) INTO THE HOLE IN THE DOWN RIGHT SIDE PANEL (G).
- PLACE CAM-BOLTS(J) INTO THE HOLES IN THE DOWN BACK PANEL (H) AND ATTACH USING 1 CAM-LOCK (K).

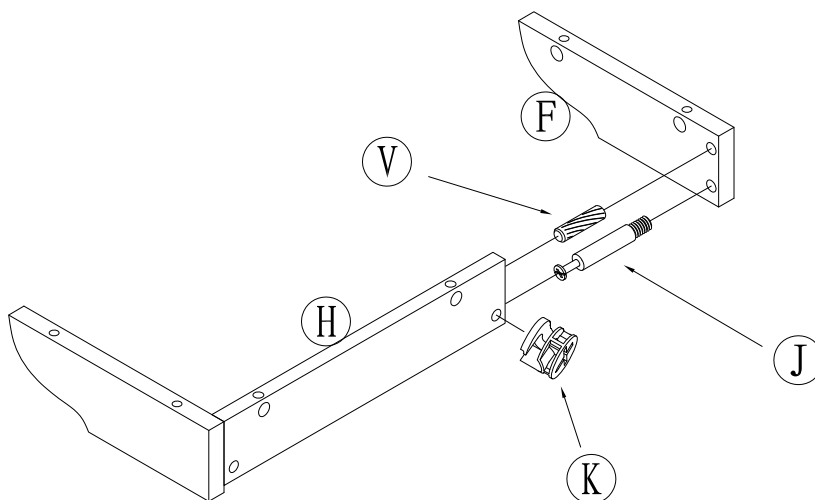


4). ASSEMBLE THE DOWN BACK PANEL (H).

- ROTATE 1 CAM-BOLT(J) AND INSERT 1 DOWEL(V) INTO THE HOLE IN THE DOWN LEFT SIDE PANEL (F).
- PLACE CAM-BOLTS(J) INTO THE HOLES IN THE DOWN BACK PANEL (H) AND ATTACH USING 1 CAM-LOCK (K).

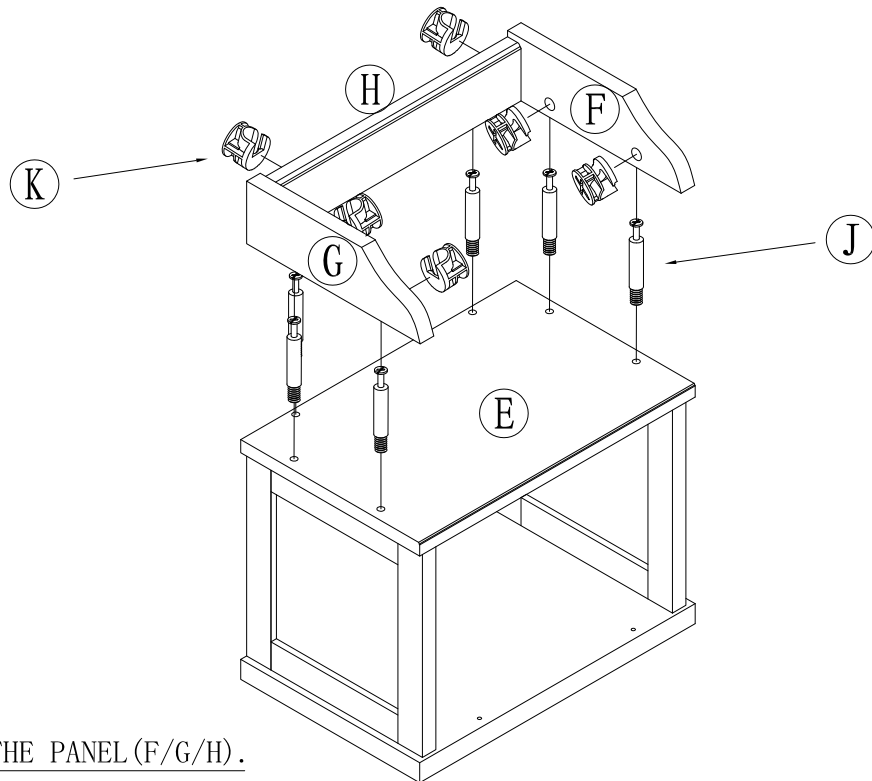


5). ASSEMBLE THE PANEL (F/G/H).

- ROTATE 6 CAM-BOLTS (J) INTO THE HOLES IN THE BOTTOM PANEL (E).
- PLACE CAM-BOLTS (J) INTO THE HOLES IN THE PANEL (F/G/H) AND ATTACH USING 6 CAM-LOCKS (K).

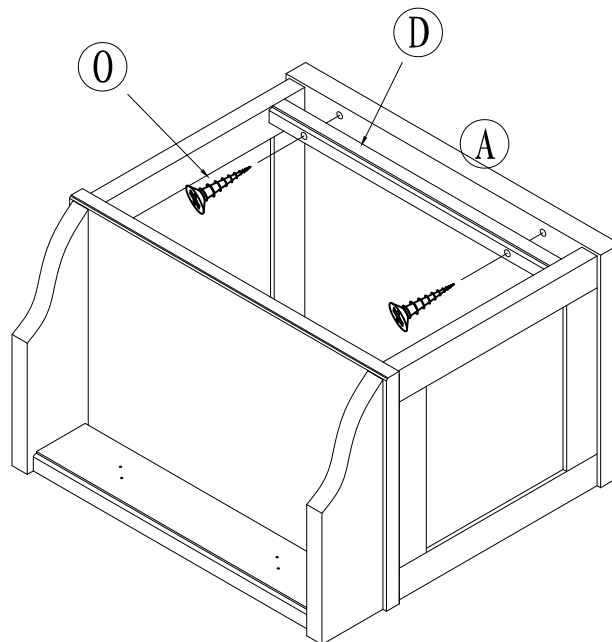


6). ASSEMBLE THE ADORNING PANEL (D).

- ATTACH THE ADORNING PANEL (D) TO TOP PANEL (A) USING 2 SCREWS (O).

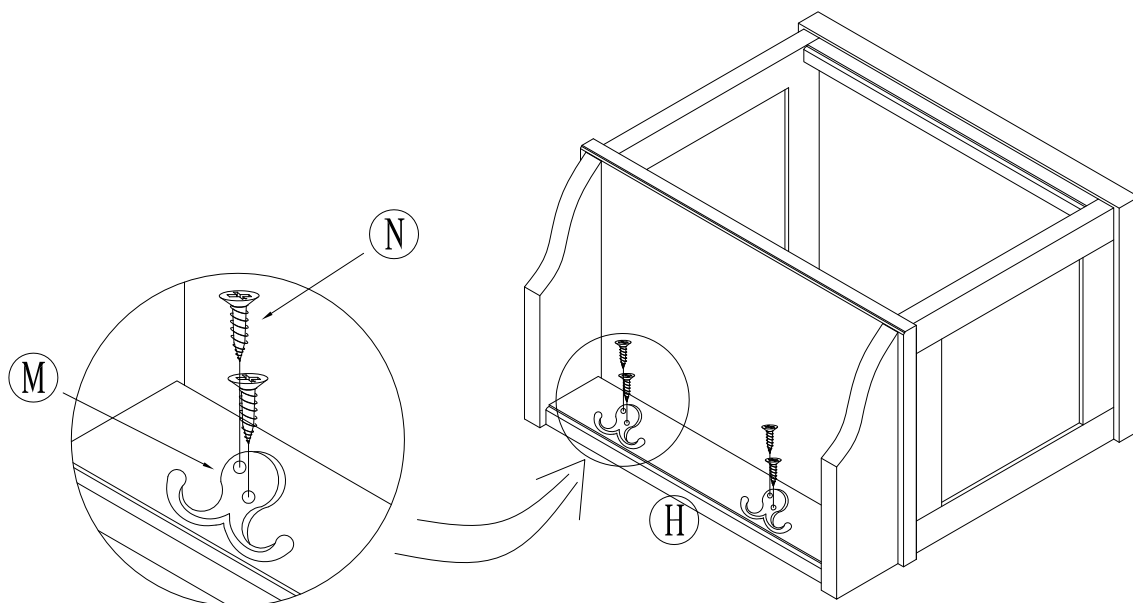


7). ASSEMBLE THE POTHOOKS (M).

- ATTACH THE POTHOOKS (M) TO DOWN BACK PANEL (H) USING 4 SCREWS (N).

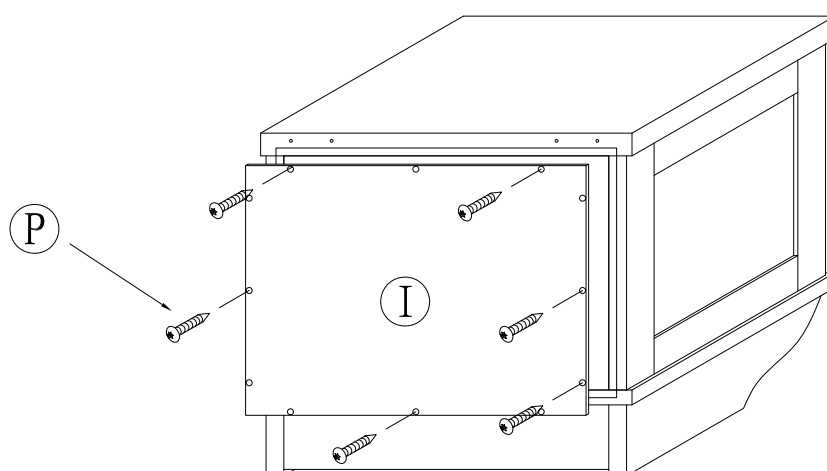


8). ASSEMBLE THE BACK PANEL (I).

- ATTACH THE BACK PANEL (I) USING 12 SCREWS (P).


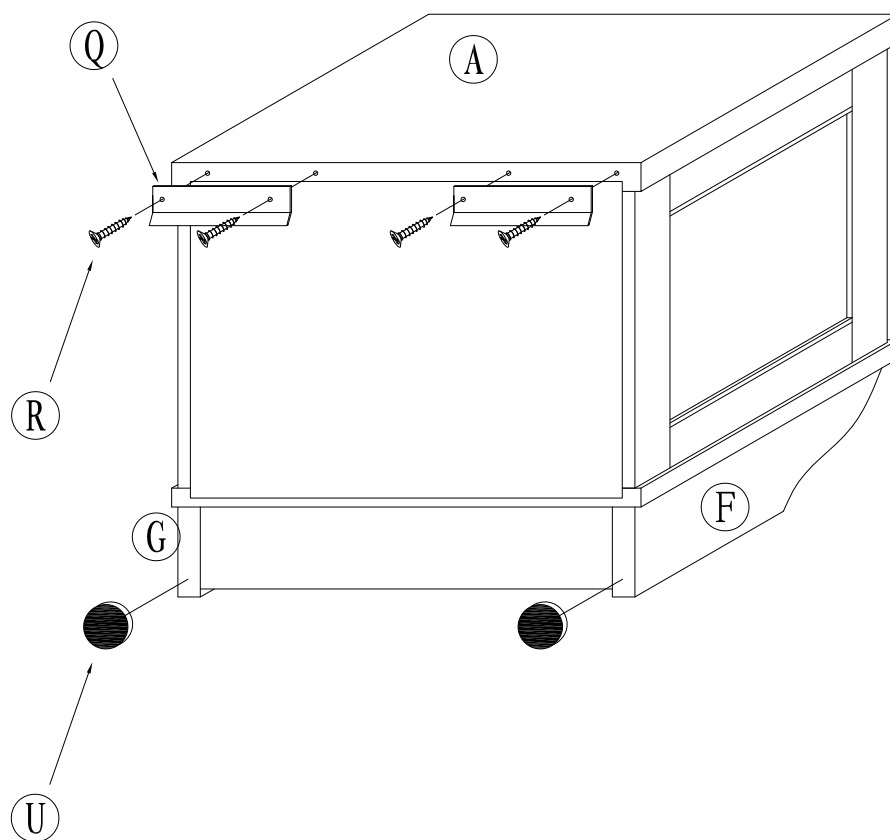


9). ASSEMBLE THE SHEETIRONS(Q).

- ATTACH 2 SHEETIRONS(Q) TO TOP PANEL(A) USING 4 SCREWS(R).
- ATTACH 2 EVA PADS(U) TO SIDE PANEL(F/G).

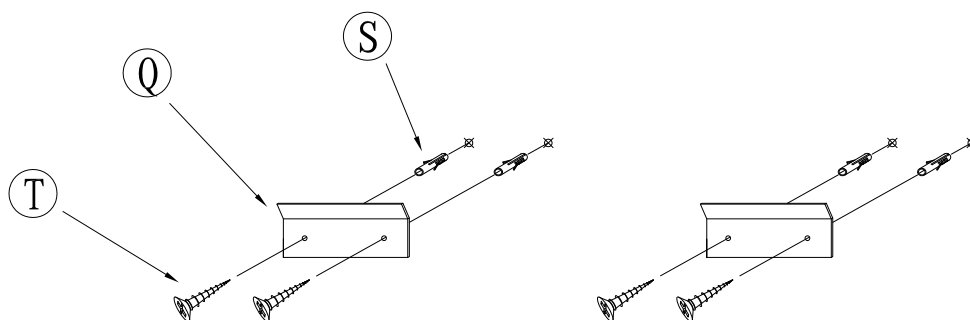

wall

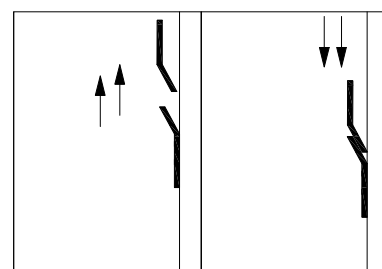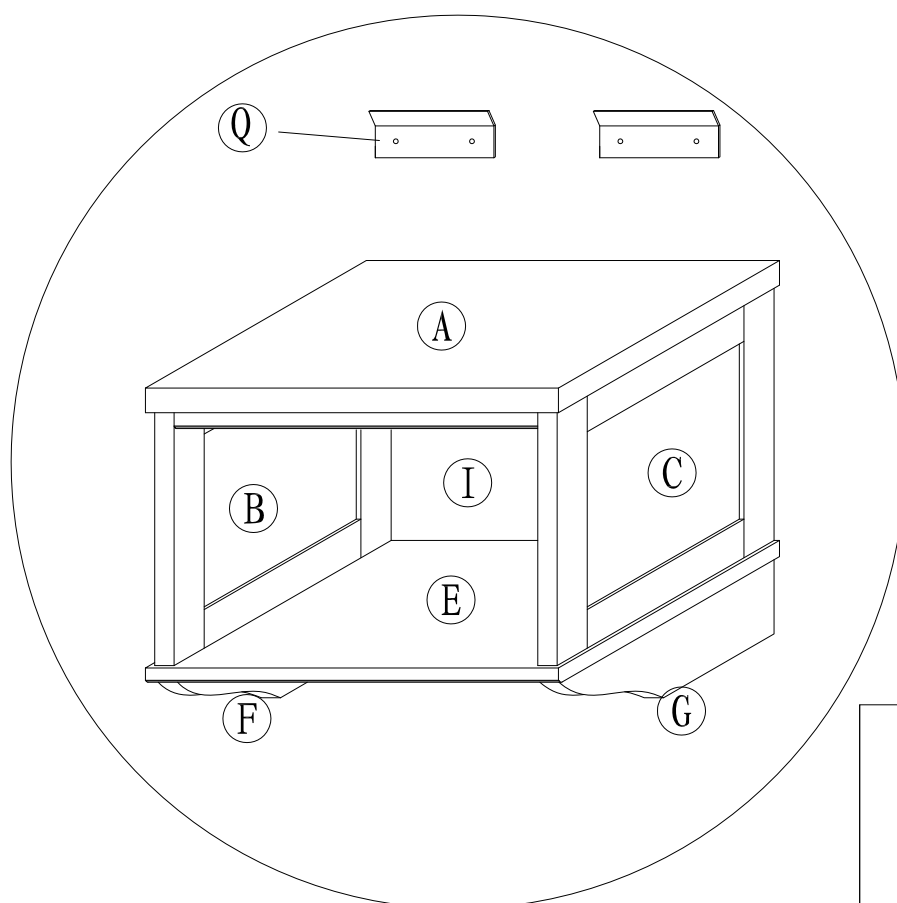

10) ASSEMBLE THE GECKOS(S).

- DRILL 4 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 4 GECKOS(S) INTO THE HOLES ON THE WALL. THEN ROTATE 4 SCREWS(T) INTO THE GECKOS(S).
- HANG THE CABINET ONTO THE SHEETIRONS(Q).